



Description

When the SR-200 desk receive a call, two independent switches of the IW-50 change their status. This allows to activate and/or to deactivate systems that are considered necessary, to send a dry-end contact to the fire central station, to activate a light, to activate an acoustic warning, etc.

The status remains changed until the call is canceled, either from the SR-200 desk or from the secondary desk. At this moment the two switches of the IW-50 go to rest mode.

Contact specifications

Number of contacts	2
Rated current / Maximum peak current (A)	8 / 15
Rated voltage / Maximum switching voltage (VAC)	250 / 400
Minimum switching load (mW (V / mA))	300 (5 / 5)
Contact material	AgNi

Contact diagram

