UW-18 TELEPHONE INTERFACE Nurse Call udeCOM Version 6.0A compatible with v2-4.0 UC-102 version or higher System Ħ 2 3 VOX CONTROL ADJUSTMENT AUDIO VOLUME AUDIO MESSAGE VOLUME MICROPHONE VOLUME DISPLAY LCD 6 RESET TECHNICAL MODE SOCKET 9 UW-102 PLUG (RIBBON CABLE)

10

CHARACTERISTICS The UW-18 allows the intercom audio connection between UC-104 (room substation) and a telephone. The system will provide the bedroom number, floor and type of call through an audio

10

CONFIGURATION:

Plug and play

Once installed the phone interface (UW-18) and plugged to the UW-102 it will work completely automatic.

message. This interface can be connected to a PABX or just a wireless analog station phone.

Phone connection

- Insert the plug of the telephone cord into the jack input (click into the place) or connect to the euroblock terminal.
- Place the cord in cable duct.
- Insert telephone jack into telephone socket.

Audio adjustments:

The UW-18 has an audio factory configuration. You can adjust the intercommunication volumes (phone loudspeaker and microphone) and the system audio message volume.

- 1. Choose the potentiometer you want to adjust
- 2. Tune the required level.

Display messages

Anytime the display shows the operating state of the UW-18 like attending calls, playing audio message, etc. This information is only for technical staff and can give information of the system.

If you connect the associated telephone interface to a digital central station, an analog-digital adapter is mandatory.



EQUIPOS Y SISTEMAS MEGAFONÍA / INTERCOM • PUBLIC ADDRESS SYSTEMS UNIÓN DESARROLLOS ELECTRÓNICOS Tel.: +34 934 772 854 / +34 609 914 787 • ude@udeaudio.com • BARCELONA - SPAIN

UDE se reserva el derecho de variar las características técnicas de sus productos sin previo aviso • UDE reserves the right to modify




the technical characteristics of its products without previous notice

TELEPHONE ANALOG JACK (RJ11)

TELEPHONE ANALOG CONNECTOR (EUROBLOCK)



UW-18

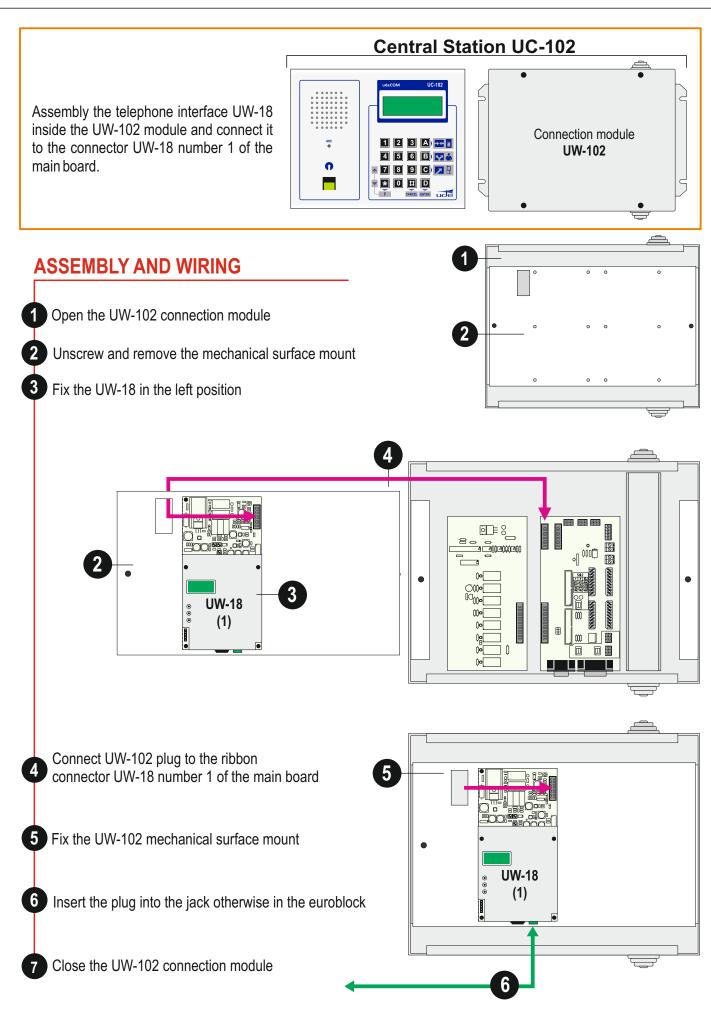

ucle