

PHYSIC CONNECTIONS


First time connections, IPU-360A must be connected to:

LAN port. **11**

DC Power supply. **6**

It is not necessary to connect a TFT screen or mouse / keyboard. Due to the telematic manage system. These devices should only be used in specific cases out of this manual.

The system does not require a USB key for user authentication, this action will be performed by password on the webserver.

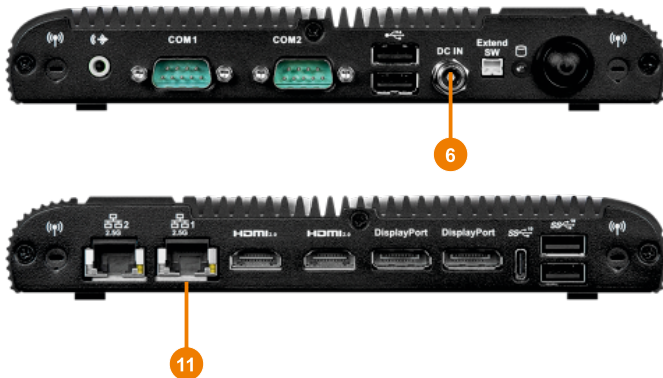

NETWORK CONFIGURATION

The IPU-360A administrator should connect to the IP of the equipment with a web browser. The equipment has factory fix IP, but the server can work in DHCP mode too.

First connection. Factory net configuration is: 192.168.0.254 / 255.255.255.0

The main access webpage is:

ADMINISTRATOR


User: root
Default password: IPUroot360

OPERATOR


User: operator
Default password: operator

Access in administrator mode allows access to system configuration and management options.


Access in operator mode only allows basic configuration and monitoring functions.

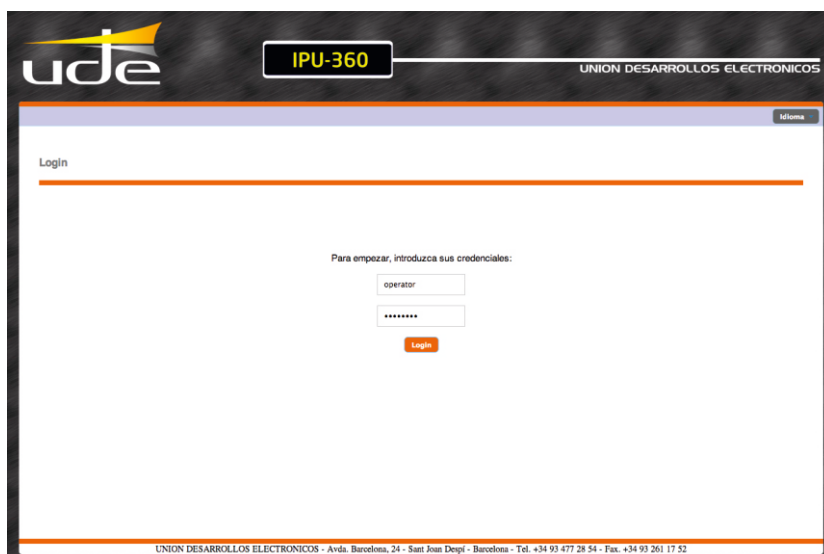

LATERAL PANELS

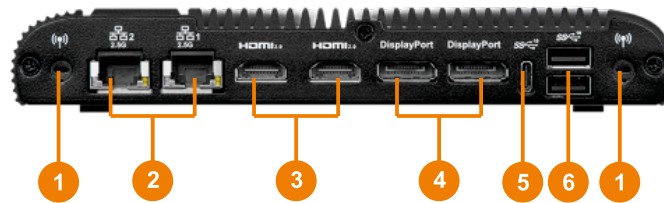

- | | |
|--------------------------|--------------------------|
| 1 Antena | 4 Display Port x2 |
| 2 LAN 1 / LAN 2 | 5 USB 3.2 |
| 3 HDMI 1 / HDMI 2 | 6 USB 2.0 x2 |

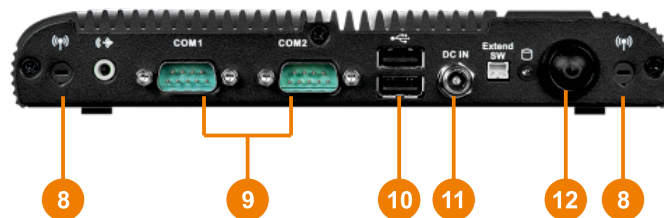

- | | |
|------------------------|---------------------------|
| 8 Antena 1 | 11 DC IN |
| 9 COM 1 / COM 2 | 12 ON / OFF Button |
| 10 USB 2.0 x2 | |