

Description

The IW-18 telephone interface allows call handling and communications between IR404, SI-60 or IR-62/X Intercom points and a telephone. This interface can be connected to an analogue telephone exchange (PABX) or directly to an analogue cordless directly to an analogue cordless DECT type telephone.

If you connect the associated telephone interface to a digital exchange, an analogue-to-digital adapter is required.

Intercom 200

CONFIGURATION:

PLUG AND PLAY

Once installed the phone interface IW-18 and plugged to the IW-2XXX it will work completely automatic.

PHONE CONNECTION

- Insert the plug on telephone cord into the jack (click into the place) or connect to the euroblock terminal.
- Place the cord in cable duct.
- Insert telephone jack into telephone socket.

AUDIO ADJUSTMENTS

The IW-18 has an audio factory configuration. You can adjust the intercommunication volumes (phone loudspeaker and microphone) and the system audio message volume.



1. Choose the potentiometer you want to adjust
2. Tune the required level.

DISPLAY MESSAGES

Anytime the display shows the operating state of the IW-18 like attending calls, playing audio message, etc. This information is only for technical staff and can give information of the system.

ID-200+IW-2XXX

Assembly the telephone interface IW-18 inside the IW-2xxx module and connect.

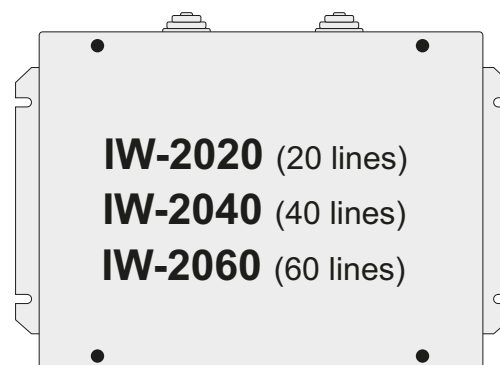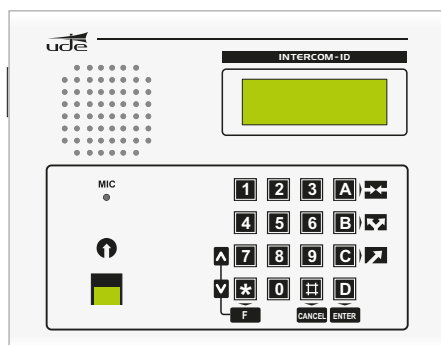

Assembly and wiring

- 1** Open the IW-2XXX connection module.
- 2** Unscrew and remove the mechanical surface mount.
- 3** Fix the IW-18 in the left position.
- 4** Connect the ribbon plug of the IW-18 to the P6 IW-18 connector on 107.427 electronic board.
- 5** Fix the IW-2XXX mechanical surface mount.
- 6** Insert the plug into the jack otherwise in the euroblock.
- 7** Close the IW-2XXX connection module.

