

Description

The SW-18 allows the intercom audio connection between SR-204 (room substation) and a telephone. The system will provide call information like bedroom or floor. This interface can be connected to a PABX or just a wireless station phone.

Configuration

PLUG AND PLAY

Once installed the phone interface SW-18 and plugged to the SW-2XXX it will work completely automatic.

PHONE CONNECTION

- Insert the plug on telephone cord into the jack (click into the place) or connect to the euroblock terminal.
- Place the cord in cable duct.
- Insert telephone jack into telephone socket.

AUDIO ADJUSTMENTS


The SW-18 has an audio factory configuration. You can adjust the intercommunication volumes (phone loudspeaker and microphone) and the system audio message volume.

1. Choose the potentiometer you want to adjust
2. Tune the required level.

DISPLAY MESSAGES

Anytime the display shows the operating state of the SW-18 like attending calls, playing audio message, etc. This information is only for technical staff and can give information of the system.

SR-200 + SW-2XXX

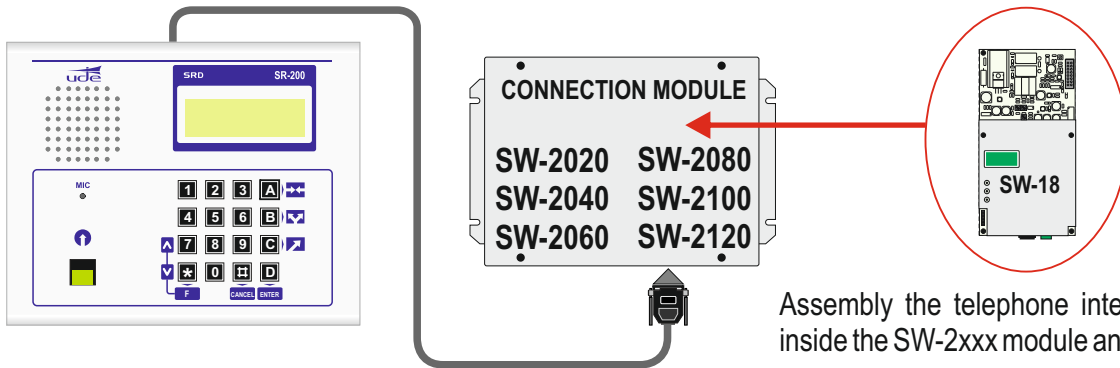

Assembly the telephone interface SW-18 inside the SW-2xxx module and connect.

Assembly and wiring

1 Open the SW-2XXX connection module.

2 Unscrew and remove the mechanical surface mount.

3 Fix the SW-18 in the left position.

4 Connect the ribbon plug of the SW-2xxx to the P6 SW-18 connector on 107.427 electronic board.

5 Fix the SW-2XXX mechanical surface mount.

6 Insert the plug into the jack otherwise in the euroblock.

7 Close the SW-2XXX connection module.

