



# BG-50 / BP-30

Exponential horns

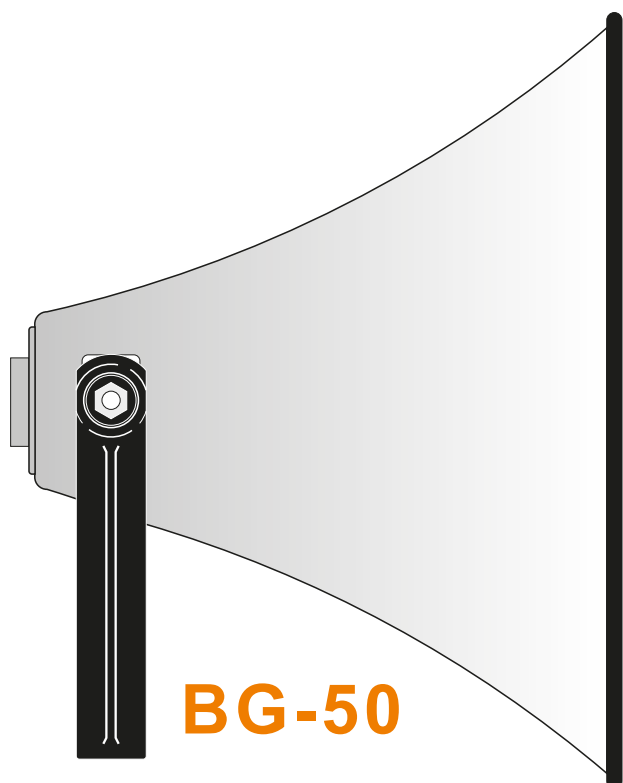


**BG-50**

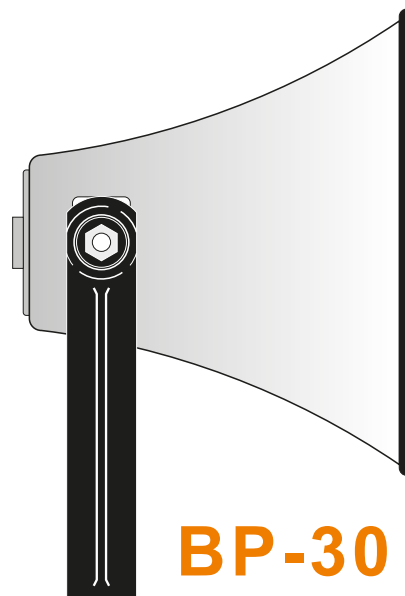


**BP-30**

## HORN

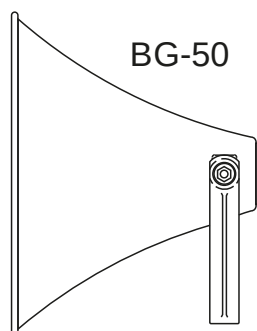


**BG-50**

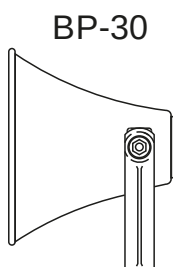


**BP-30**

## DRIVER UNIT

**SD-40T**  
Membrane  
MSD-40T

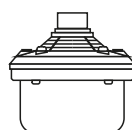


**SD-60T**  
Membrane  
MSD-60T

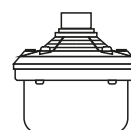


**SD-40**  
Membrane  
MS-40




**Horn: BG-50**  
**Driver unit: SD-40T / SD-60T**

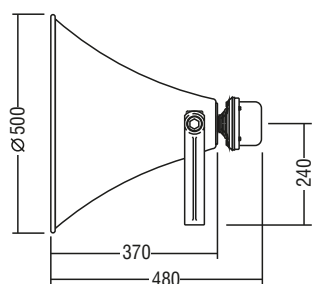


**Horn: BP-30**  
**Driver unit: SD-40T**

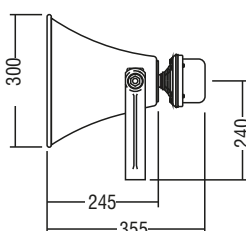

**Horn: BG-50**  
**Driver unit: SD-40**

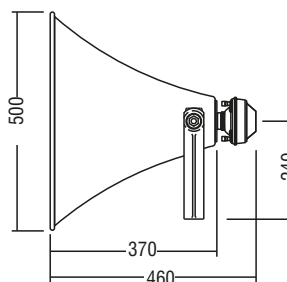

**Horn: BP-30**  
**Driver unit: SD-40**

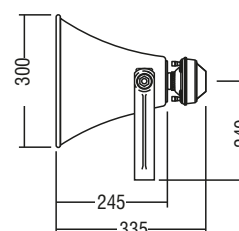



EQUIPOS Y SISTEMAS MEGAFONÍA/INTERCOM • PUBLIC ADDRESS SYSTEMS  
**UNIÓN DESARROLLOS ELECTRÓNICOS**

Tel.: +34 934 772 854 / +34 609 914 787 • ude@udeaudio.com • BARCELONA - SPAIN

[www.udeaudio.com](http://www.udeaudio.com)

rev.1 | 610.030A | 1 / 2

## HORN ASSEMBLY

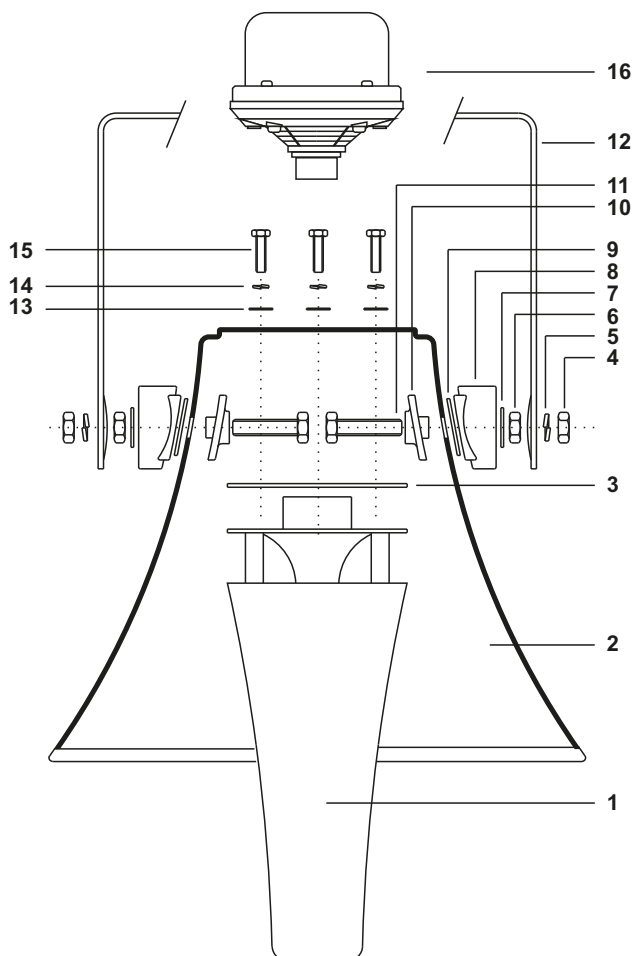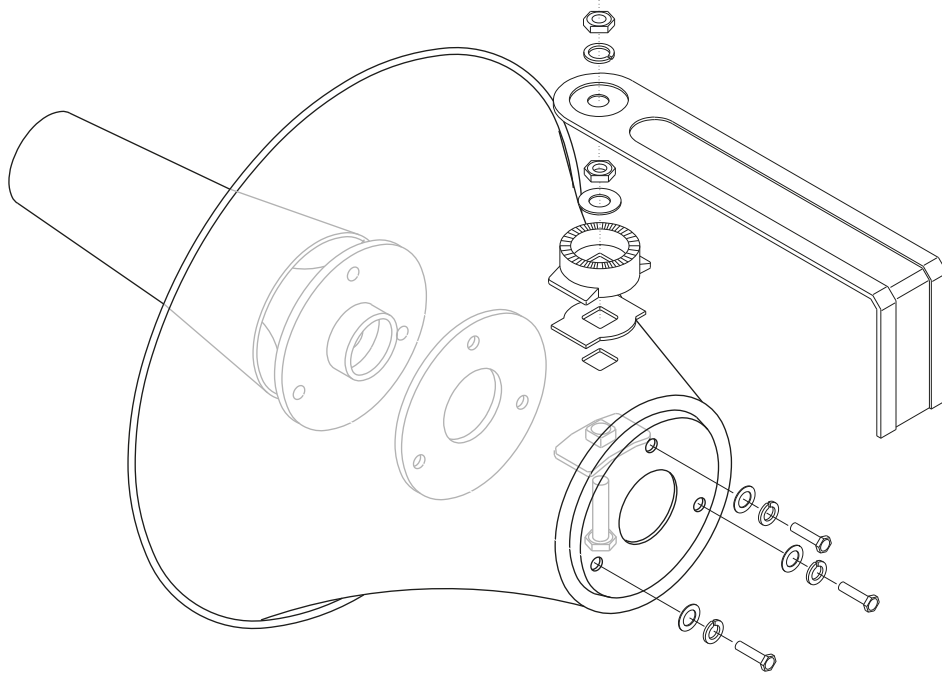

### ASSEMBLY OF THE UNIT

Tools required:

- Size 10 spanner.
- Size 14 spanner.

- 1.- Insert the screw (11) into the inside support (10).
- 2.- Fit this unit to the square hole of the horn.
- 3.- Fit the rubber washer (9), the outside support (8), flat washer (7), the nut (6) and tighten.
- 4.- Repeat the procedure on the other side of the horn.
- 5.- Mount the cone (1) using the gasket (3), the flat washers (13), the grower washer (14) and the screw (15), taking care to line up the UDE anagram properly. Tighten.
- 6.- Fit the attaching flange (12) of the speaker and fix using the grower (5) and the nut (4) on each side, without tightening.
- 7.- Assemble the motor (16).