










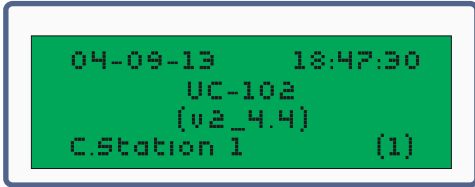
- 1 KEYBOARD
- 2 ROOM MENU key.
- 3 PRESENCE MENU key.
- 4 CALL FORWARDING MENU key.
- 5 ENTER key
- 6 CANCEL key
- 7 FUNCTION key
- 8 PUSH TO TALK button
- 9 DISPLAY
- 10 LOUDSPEAKER
- 11 MICROPHONE

# CONTENTS

STANDBY DISPLAY .....	Pag. 3
CALL DISPLAY .....	Pag. 3
RECEPTION OF CALLS .....	Pag. 4
DIRECT CALL .....	Pag. 5
CALL BY SELECTING THE ROOM'S NAME .....	Pag. 6
PRESENCES VISUALIZATION AND ATTENTION .....	Pag. 7
CONFIGURATION AND SYSTEM TEST .....	Pag. 8
 CALL FORWARDING TO TELEPHONE .....	Pag. 9
 CANCELLATION OF CALLS FORWARDED TO TELEPHONE .....	Pag. 9
 RECEPTION OF CALLS USING A TELEPHONE .....	Pag.10
 CALL FORWARDING TO A UC-102 CENTRAL STATION .....	Pag. 11
 CANCELLATION OF CALLS FORWARDED TO A UC-102 CENTRAL STATION .....	Pag. 11
 RECEPTION OF FORWARDED CALLS USING A UC-102 CENTRAL STATION .....	Pag. 12
 CALL FORWARDING TO A UC-104 ROOM SUBSTATION .....	Pag. 13
 CANCELLATION OF CALLS FORWARDED TO A UC-104 ROOM SUBSTATION .....	Pag. 13
 RECEPTION OF CALLS USING A UC-104 ROOM SUBSTATION .....	Pag. 14

**USE**



**STANDBY DISPLAY**



On standby:

- Date - Time
- Central type
- Software version
- Central station ID

If it were the case:

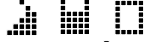- Call forwarding indication 
- Indication of enabled presences 
- Call forwarding indication on the receiver central station

**CALL DISPLAY**

The calls appear on the screen indicating:


**-CALL TYPE:**

- Room call
- Bed 1 call
- Bed 2 call
- Auxiliary call
- Bath call
- Geriatric bath call
- Emergency call.

**-FLOOR NUMBER**


**-ROOM NUMBER**

Besides, every call is identified with a different ringtone according to its type.

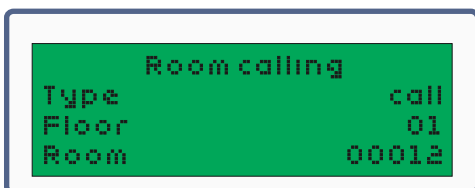


Next, the call will be added to the pending calls list.

**Example:** Normal call from room 12

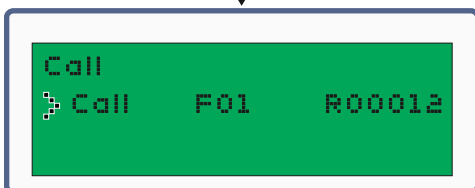


If a new call is made, it will be shown as followed:

**Example:** Emergency call from room 15

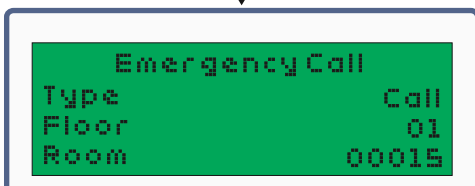

Next, the call will be added to the queue calls list. The different incoming calls will be ordered by priority and reception, in descending order.

**Example:** Emergency call's incorporation from room 15.

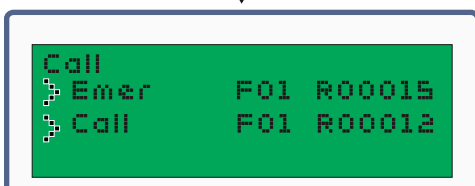

## USE

## RECEPTION OF CALLS

```

Call
┌ Emer   F01 R00015
└ Call   F01 R00012
  
```

In order to attend calls in the list's order, push any intercommunication button.



If you would rather attend calls in a different receiving order, you may do so by using the keys to move the cursor up and down.



Next, press ENTER. **D** ENTER


```

Wait
  
```

To be able to talk, press   Release to listen

The communication is automatically cancelled if no button is pressed during 30 seconds.

**Audio volume:** the audio volume can be modified using the keys from 1 to 7 while communications is established.

To end the communication, press CANCEL.  CANCEL

```

Room call
Floor      01
Room 12
AP0:50    Volume:2
  
```

```

Wait
  
```

The message "Wait" will appear on the display while the communication is being cancelled.

```

Call:
┌ Emer   F01 R00015
  
```

The display will then return to the unattended calls list screen.


```

04-09-13  18:47:30
          UC-102
          (v2_4.4)
C.Station 1 (1)
  
```

If there are no more unattended calls, the display will return to the standby screen.

USE

DIRECT CALL

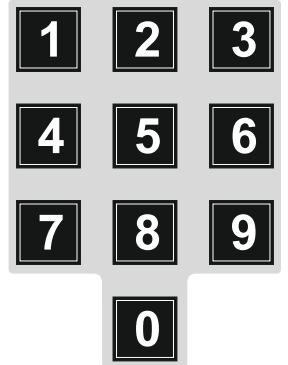

```
04-09-13 18:47:30
UC-102
(v2_4.4)
C.Station 1 (1)
```

Select a substation and enter the extension code by using the keyboard

```
Extension. _3
Room number
```

The name of the room assigned to the extension will appear on the display.

**Example: call extension 103**

Next, press ENTER. ENTER

```
Connecting...
Floor 01
Room 00003
```

The display will show the message "Connecting..." while the communication is being established.

```
Room call
Floor 01
Room 3
APO: 50 Volume: 2
```

The intercom's screen will show up on the display indicating the following parameters:

- Floor number
- Room number
- APO: remaining time for automatic call release.
- Audio volume: it can be modified using the keys from 1 to 7 while communications is established.

To be able to talk, press Release to listen

To end the communication, press CANCEL. CANCEL

```
Wait
```


The message "Wait" will appear on the display while the communication is being cancelled.

```
04-09-13 18:47:30
UC-102
(v2_4.4)
C.Station 1 (1)
```


The display will then return to the unattended calls list screen.

## USE


### CALL BY SELECTING THE ROOM'S NAME

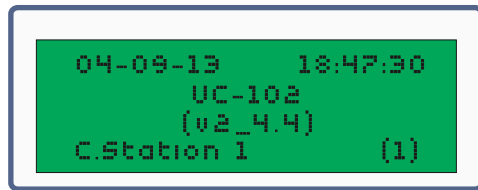

Open the menu of the names assigned to the rooms by pressing

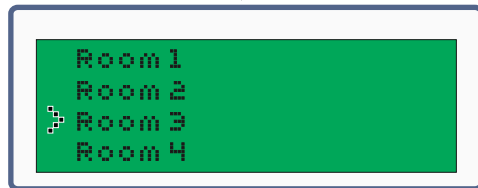


Look for the room you wish to call by moving up and down through the menu using the following keys

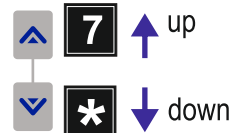


Select the room's name  
**Example: Room 3**

Next, press ENTER

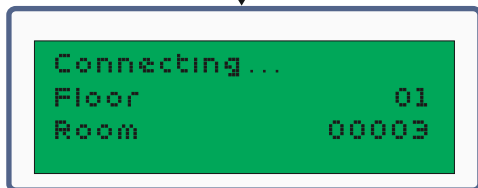

The display will show the message **"Connecting..."** while the communication is being established.

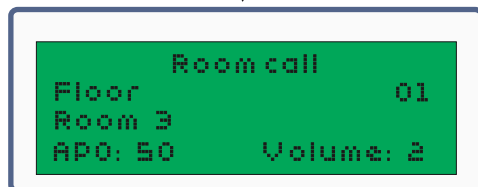


The intercom's screen will show up on the display indicating the following parameters:


- Floor number
- Room number
- APO: Remaining time for automatic release.
- Audio volume: it can be modified using the keys from 1 to 7 while communications is established

To be able to talk, press   Release to listen

To end the communication, press CANCEL.

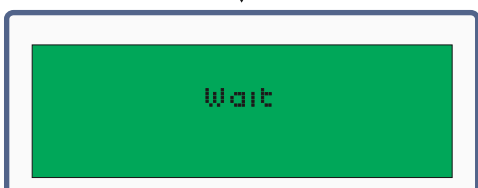


The message **"Wait"** will appear on the display while the communication is being cancelled.

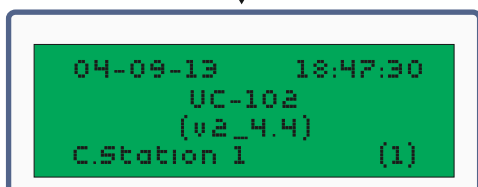

The display will then return to the unattended calls list screen.


USE

PRESENCES VISUALIZATION AND ATTENTION

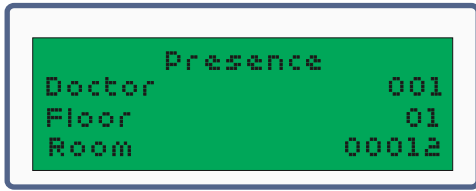


When a presence code is activated in any room, the following information will appear on the display momentarily:

- Person who enabled the presence ( doctor, nurse, auxiliary nurse, maintenance, and so on)
- Floor
- Room

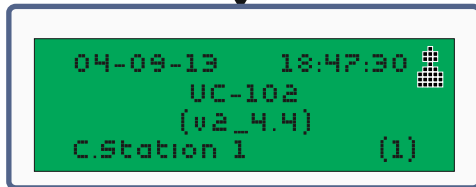

The display will then return to standby. The icon indicates that there are presences activated in the system.

To view the list of presences press **B**

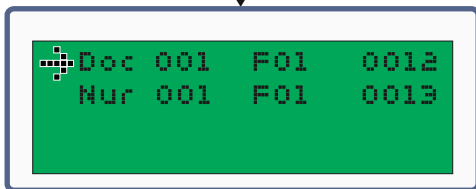


All activated presences will be displayed.


If we want to communicate, select the presence by moving up and down through the menu using the following keys



Next, press ENTER **D** **ENTER**

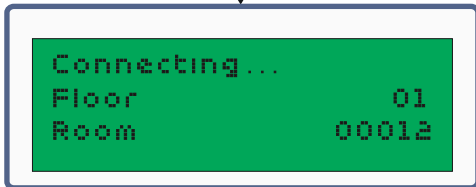

The display will show the message **“Connecting...”** while the communication is being established.

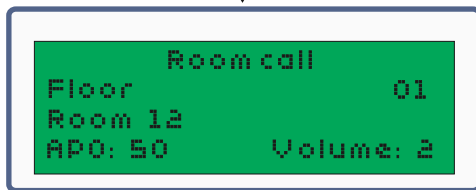


The intercom's screen will show up on the display indicating the following parameters:


- Floor number
- Room number
- APO: -Remaining time for automatic release.
- Audio volume: it can be modified using the keys from 1 to 7 while communications is established.

To be able to talk, press Release to listen.

To end the communication, press CANCEL. **CANCEL**

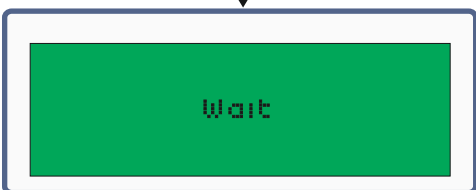

The message **“Wait”** will appear on the display while the communication is being cancelled.

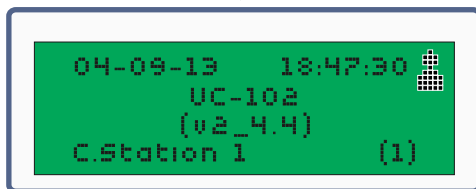


The display will then return to the unattended calls list screen.

The icon indicates that there are presences activated in the system.


**Note:** The presences appear in all central stations of the whole system and it is possible to communicate with any of them, from all central stations.


## USE

### CONFIGURATION AND SYSTEM TEST

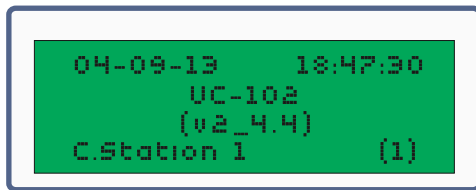

Press the button  **F**

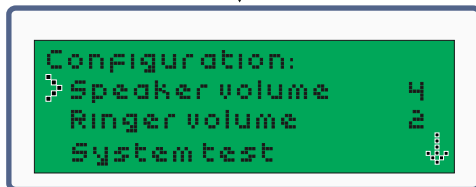


Select the configuration option by using  **F**

#### “Audio volume”

The audio level can be modified using the keys from 1 to 7

Next, press ENTER.  **ENTER**

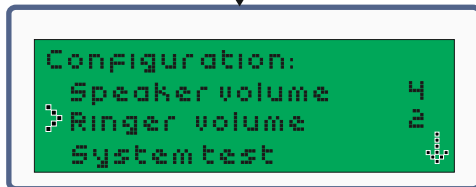


#### “Ringer volume”

When you select this option, the ringtone will play.

The audio level can be modified using the keys from 1 to 7

Next, press ENTER.  **ENTER**

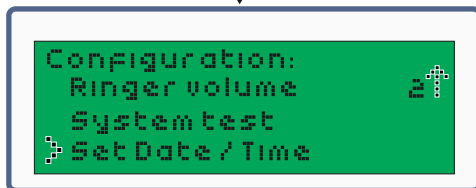


#### Set the date / Time


Press the button  **ENTER**

#### Set Date:


Change the internal date.

Introduce the day / month / year using the numeric keyboard.

Press D (Enter) to confirm.  **ENTER**

Use # (Cancel) to amend any value.  **CANCEL**


The date format is: **dd-mm-yy**.


Press D (Enter) to confirm.  **ENTER**

#### Set Time:


Change the internal time.



Introduce the hour / minute / seconds using the numeric keyboard.

Press D (Enter) to confirm.  **ENTER**

Use # (Cancel) to amend any value.  **CANCEL**


The date format is: **hh-mm-ss**.

Press D (Enter) to confirm.  **ENTER**

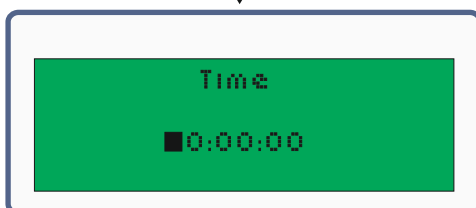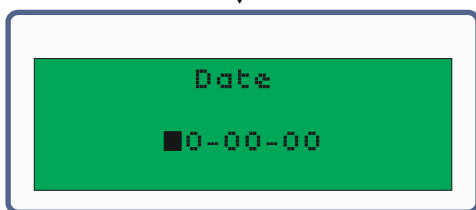

USE




CONFIGURATION AND SYSTEM TEST

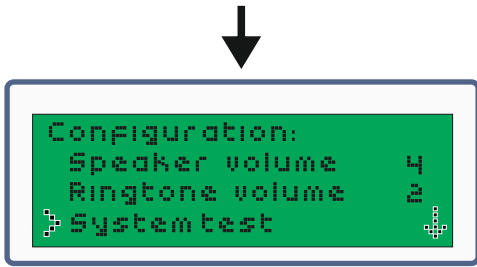

“System test”


Press ENTER **D** ENTER

The system test verifies all room substations in the list.  
 Its duration depends of the number of room substations in the system.  
 If any call is received during the test, the ringtone will play.  
 Once the test is done, the call will also appear on the display.

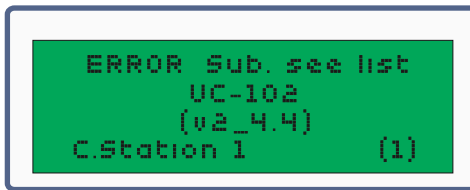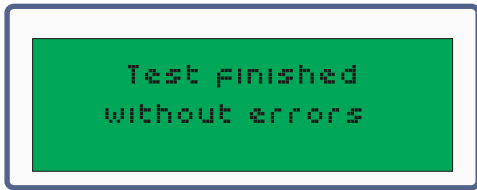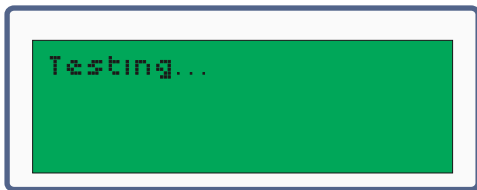


The screen indicates that there were found UNAVAILABLE room substations.

Press **D** ENTER to see the list.

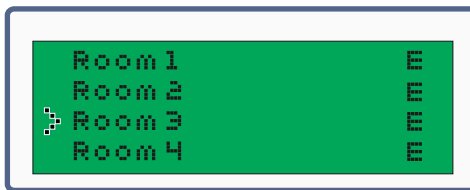

Unavailable room substations are marked with the letter E.

In order to finish the test, press **ENTER** CANCEL

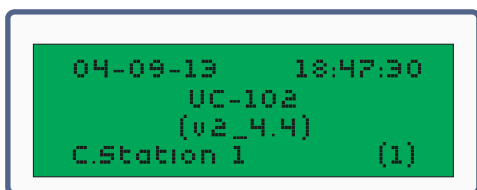

If a substation **error** was detected during the test. Check the substations indicated on the list.

USE

CALL FORWARDING TO TELEPHONE



```
04-09-13 18:47:30
UC-102
(v2_4.4)
C.Station 1 (1)
```

Press the button

```
Cancel Call Fw.
Call Fw. to Cen. St.
Call Fw. to phone
Call Fw. to UC-104
```

Select the "Call Fw. to phone" option by pressing

Next, press ENTER

```
Wait
Call Fw. enable
```

From now on this central station is inhibited, all incoming and outgoing calls will still appear on the display but will have to be managed from the telephone.

```
04-09-13 18:47:30
UC-102
(v2_4.3)
Desk1 (1)
```

The icon appearing on the display indicates that calls are being forwarded to a telephone.

To cancel the call forwarding press

```
Cancel Call Fw.
Call Fw. to Cen. St.
Call Fw. to phone
Call Fw. to room sub.
```

On the display will appear the "Cancel Call Fw." option.

Press ENTER to continue.

```
04-09-13 18:47:30
UC-102
(v2_4.4)
C.Station 1 (1)
```

Now the call forwarding is cancelled and the standby display appears.

UW-18 TELEPHONE INTERFACE

If the telephone interface is not integrated, when attempting to enable the call forwarding, the following message is shown.


```
Phone
Disconnected
```

USE

RECEPTION OF CALLS USING A TELEPHONE





To enable this function, the system must include a UW-18 telephone interface.

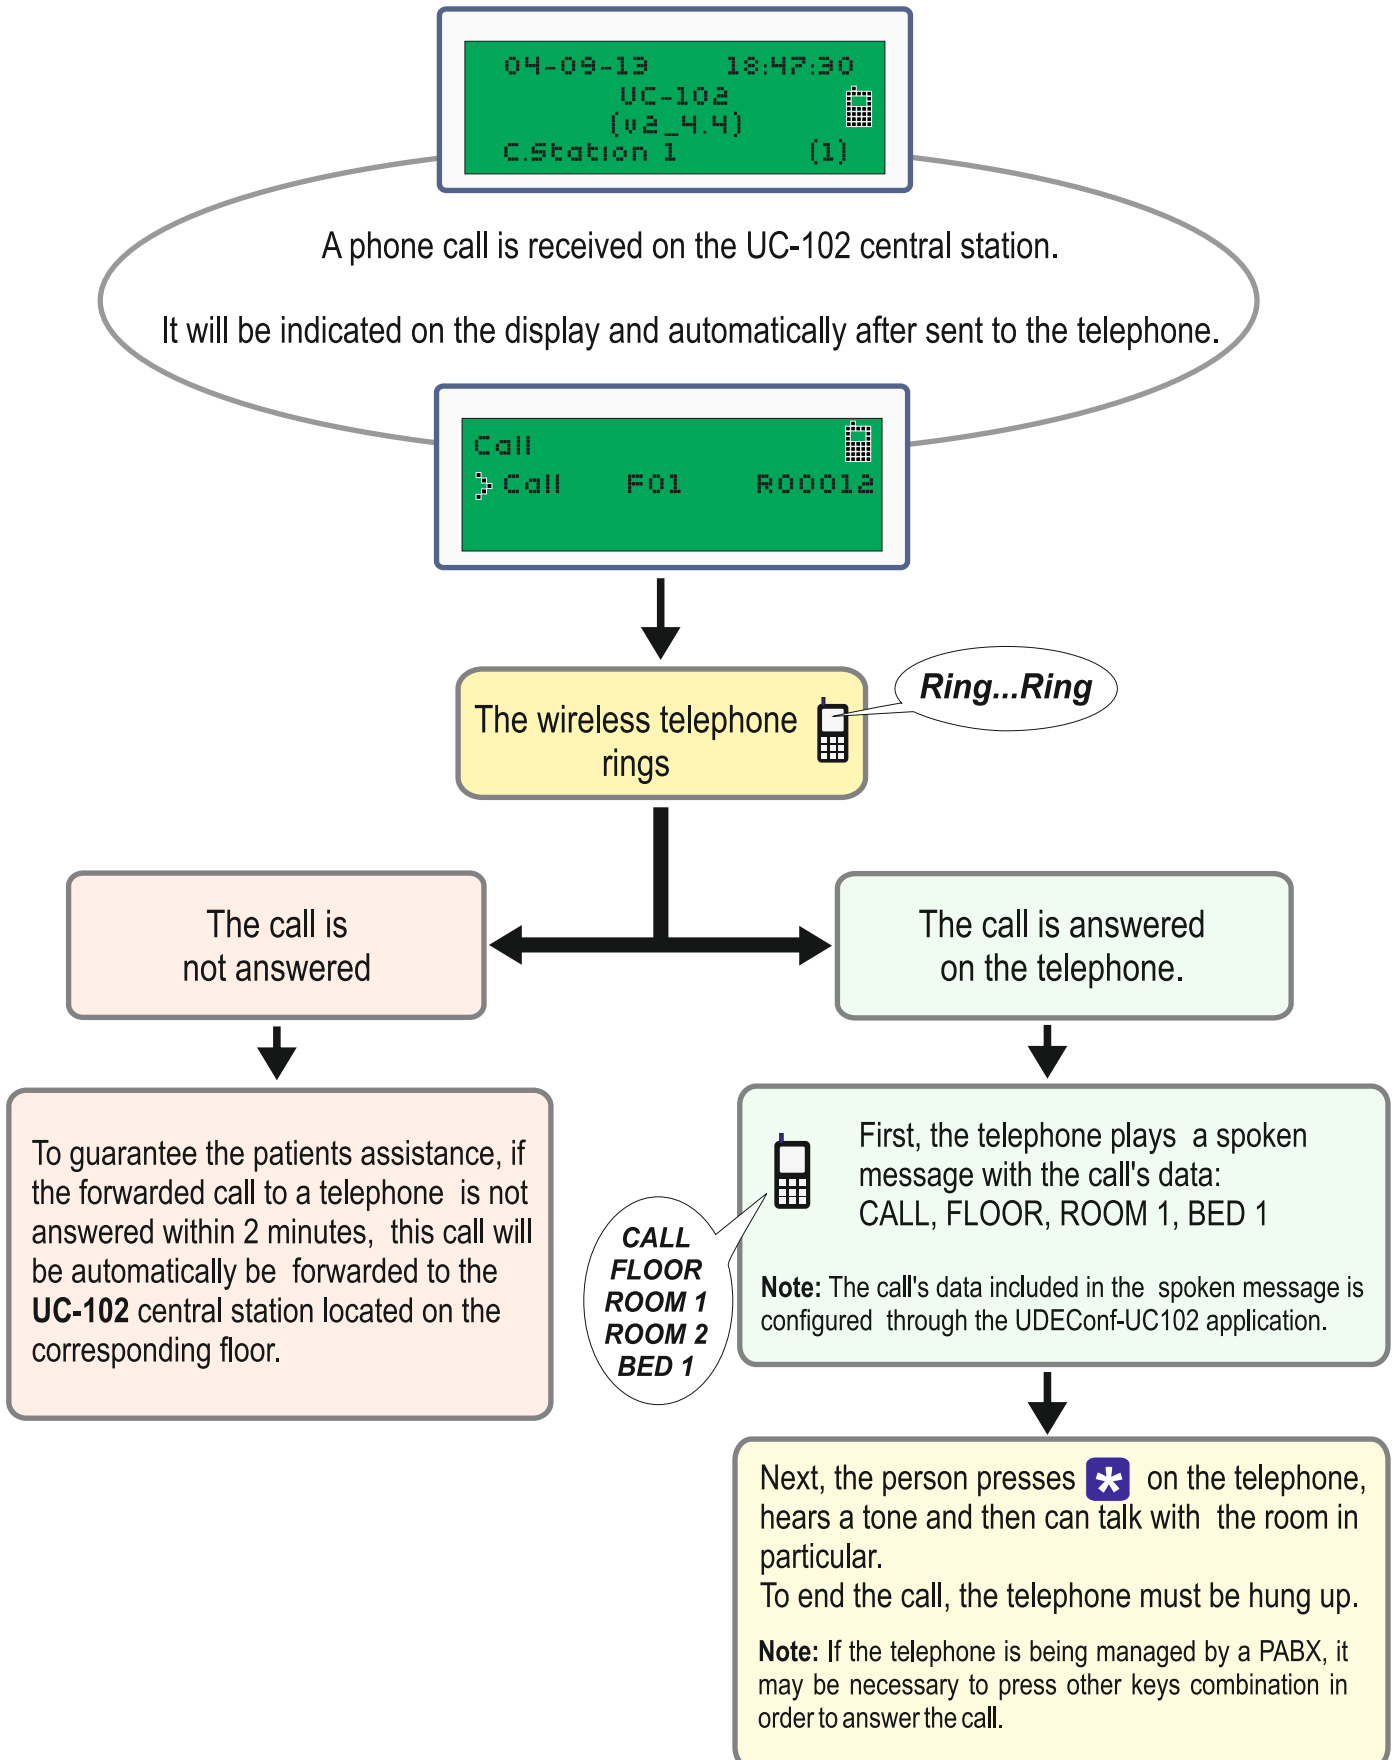


USE

CALL FORWARDING TO A UC-102 CENTRAL STATION

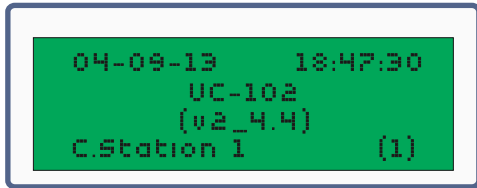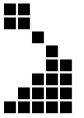


Press the button

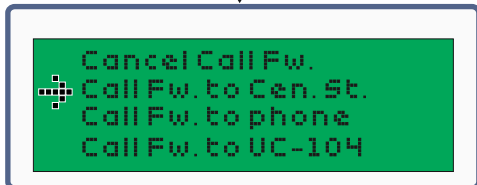



Select the "Call Fw. to Central St." option by pressing

Next, press ENTER

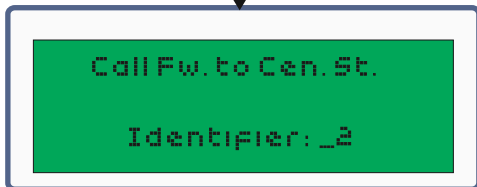


By using the keyboard, dial the central station's number to which you want to forward the call to.  
**Example: Call forwarding to central station 2**

Standby display of the Central Station to which the call is forwarded

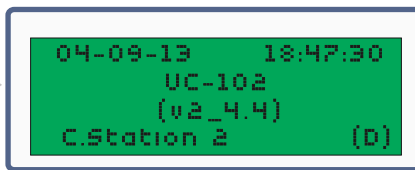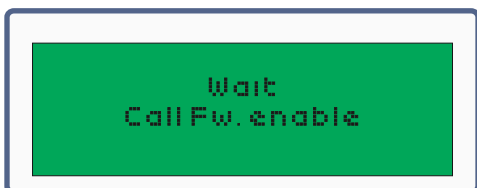


The icon (D) appearing on the screen indicates that the central station is receiving the forwarded calls from the central station of origin.  
**Note:** the central station that receives the call forwarding can also forward calls to a telephone but not to another central station.

From now on this central station is inhibited, all incoming and outgoing calls will still appear on the display but will have to be managed from the other central station.

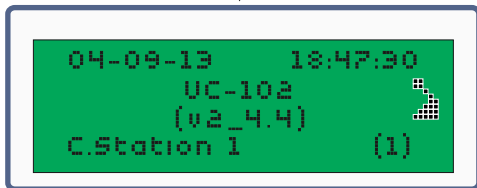


The icon appearing on the display indicates that calls are being forwarded to the other central station.

To cancel the call forwarding press

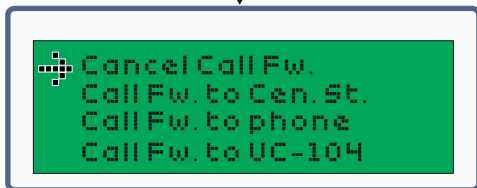

On the display will appear the "Cancel Call Fw." option.


Press ENTER to continue.

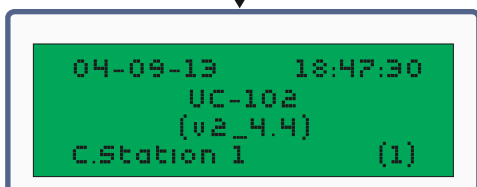

Now the call forwarding is cancelled and the standby display appears.

## USE

## CALL FORWARDING TO A UC-104 ROOM SUBSTATION

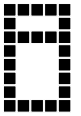

```

04-09-13  18:47:30
UC-102
(v2_4.4)
C.Station 1  (1)



```

Press the button   

```

Cancel Call Fw.
Call Fw. to Cen. St.
Call Fw. to phone
+ Call Fw. to UC-104

```

Select the "Call Fw. to Sub." option by pressing  

Next, press ENTER  

```

Wait
Call Fw. enable


```




From now on this central station is inhibited, all incoming and outgoing calls will still appear on the display but will have to be managed from the room substation with a PRESENCE activated.

```

04-09-13  18:47:30
UC-102
(v2_4.4)
C.Station 1  (1)

```

The icon  appearing on the display indicates that calls are being forwarded to the room substations



To cancel the call forwarding press   

```

+ Cancel Call Fw.
Call Fw. to Cen. St.
Call Fw. to phone
Call Fw. to UC-104

```

On the display will appear the "Cancel Call Fw." option.

Press ENTER to continue  

```


04-09-13  18:47:30
UC-102
(v2_4.4)
C.Station 1  (1)

```

Now the call forwarding is cancelled and the standby display appears

USE

RECEPTION OF CALLS BY USING A UC-104 ROOM SUBSTATION



```

04-09-13  18:47:30
UC-102
(v2_4.4)
C.Station 1  (1)
    
```

```


Room calling
Type      Call
Floor    01
Room     00012
    
```

If there is no presence activated on any of the UC-104 room substations in the system, the call will be managed from the same UC-102 central station even if the call forwarding was previously configured. The aim of this is to be able to attend the patients at all time.

```

Call
Call  F01  R00012
    
```

UC-104 ROOM SUBSTATION

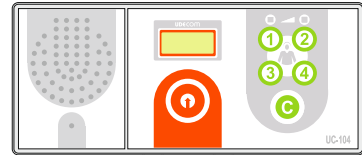

**Example:** Room with a nurse presence enabled.

While a presence is activated in a UC-104 substation of a specific room, if a call is made from another room, a ringtone will play on the substation as well as a message of the call's type and room of origin that will appear on the display

Besides the message **"Press 3"** will also appear on the display.

```

Nurs.-001
    
```

```

Cal00012
Press 3
    
```

```

Int00012
Press 4
    
```

```

Nurs.-001
    
```

To attend the call:

**3** Button "3"  
Press to attend the call

**4** Button "4"

**C** Button "C".  
Cancels the call.  
Then the display will return to showing the activated presence

**Note 1:** If there are several presences activated but no answer, the display will rotate indicating the different presences available.

**Note 2:** Call forwarding to a UC-104 room substation affects individually to each central station.